 
 
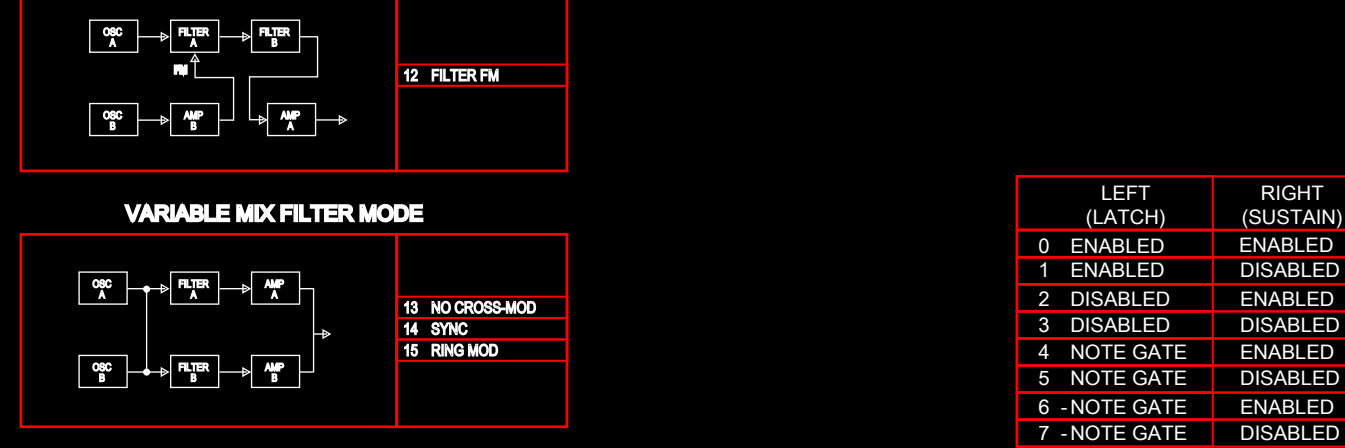 
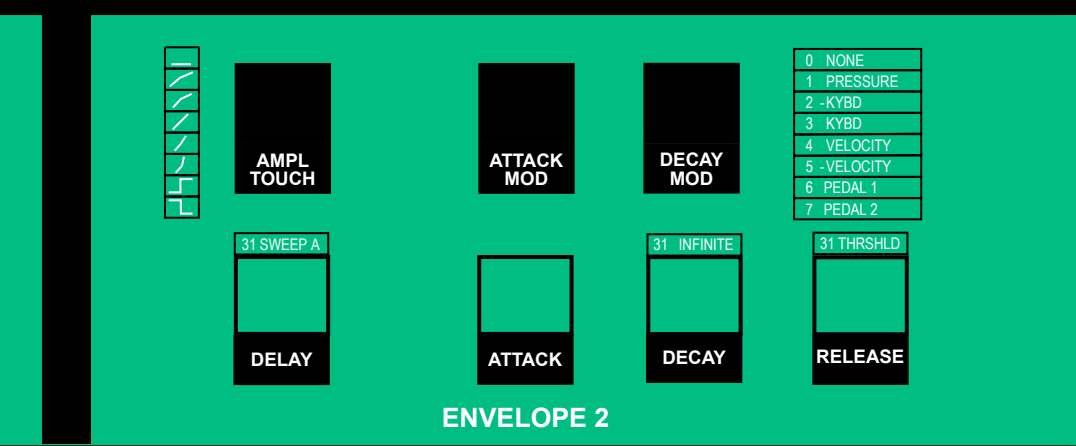 
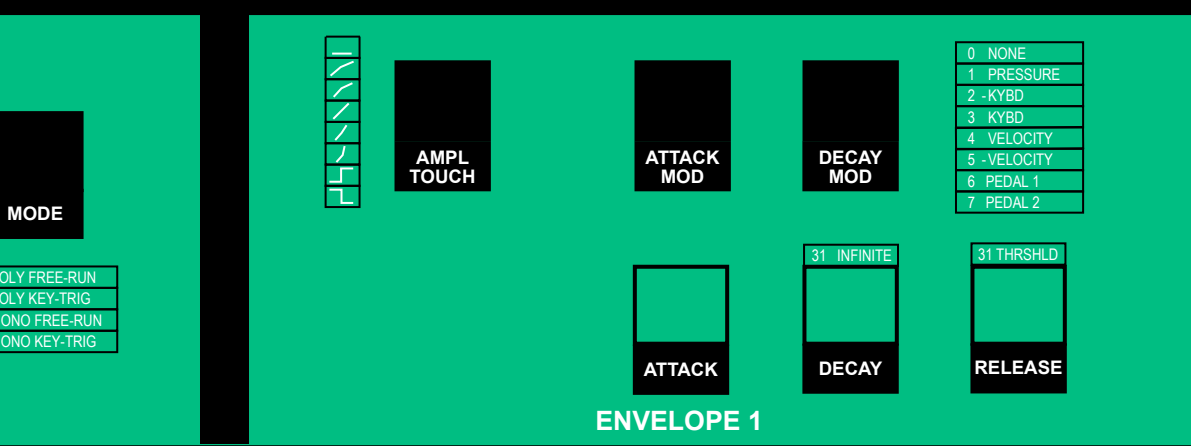 
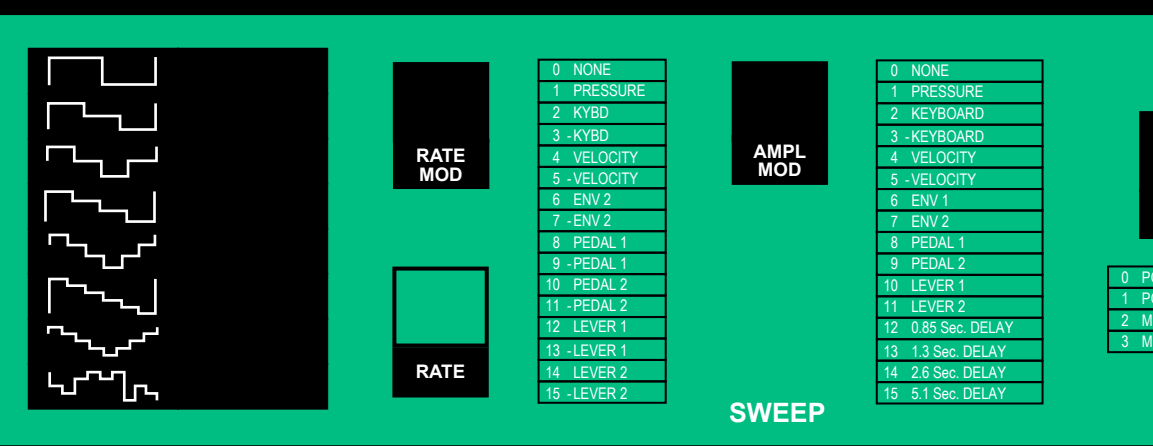 
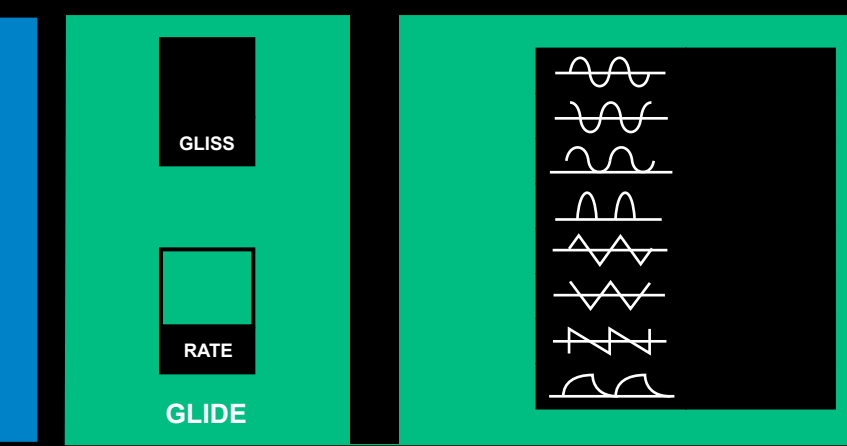 
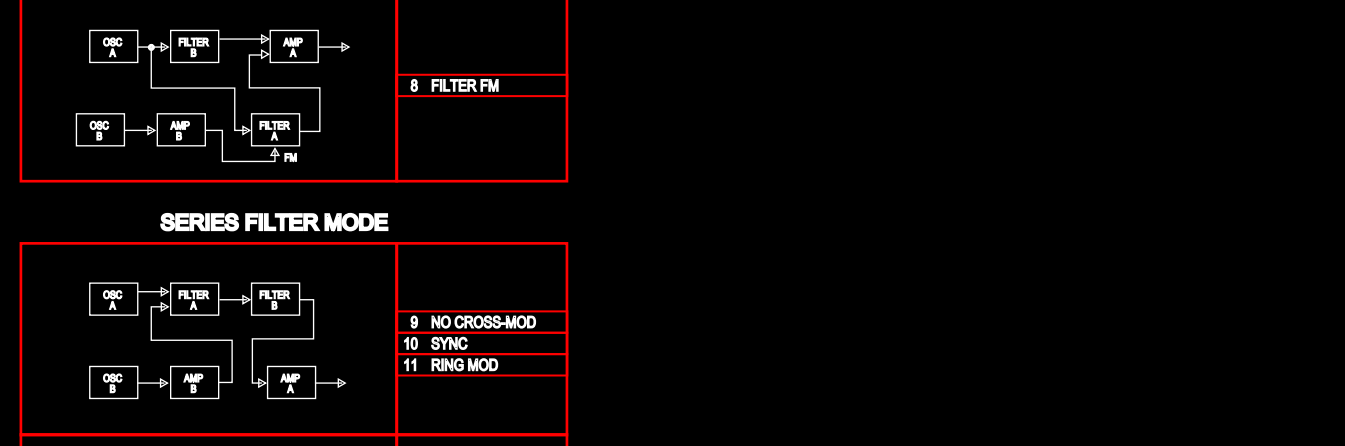 
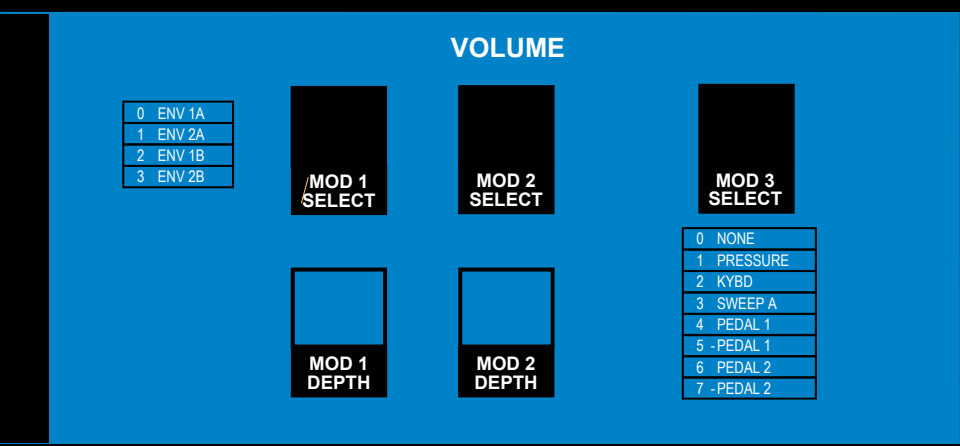 
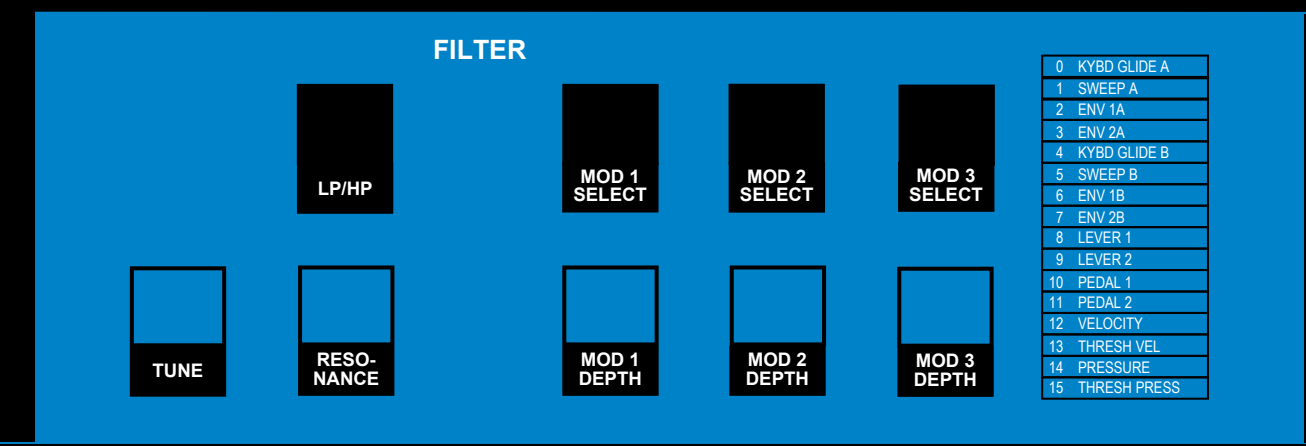 
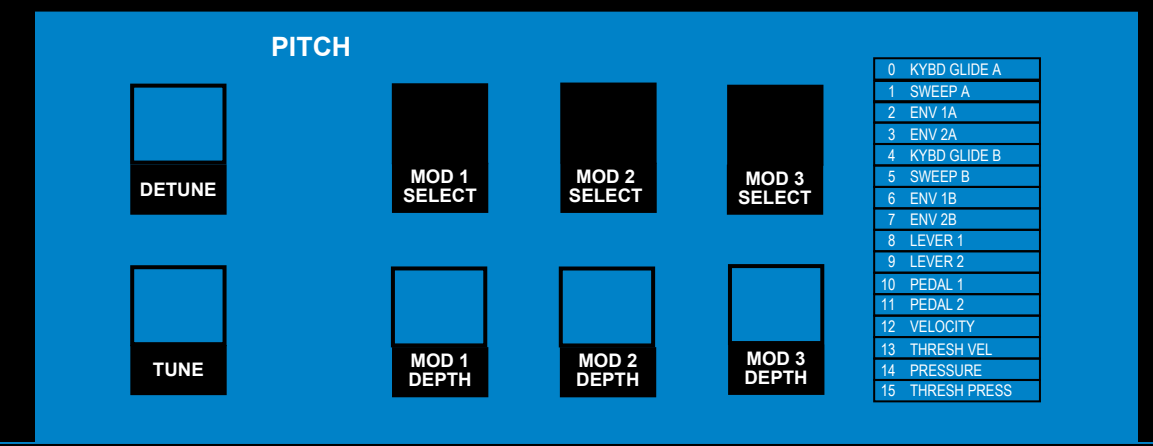 
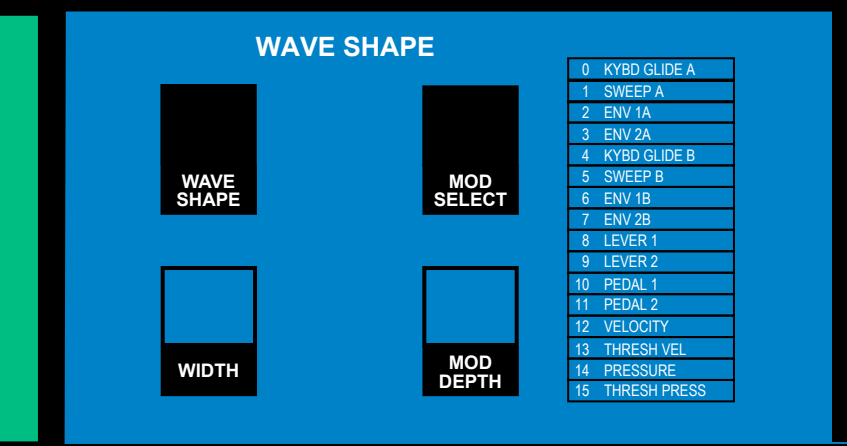 
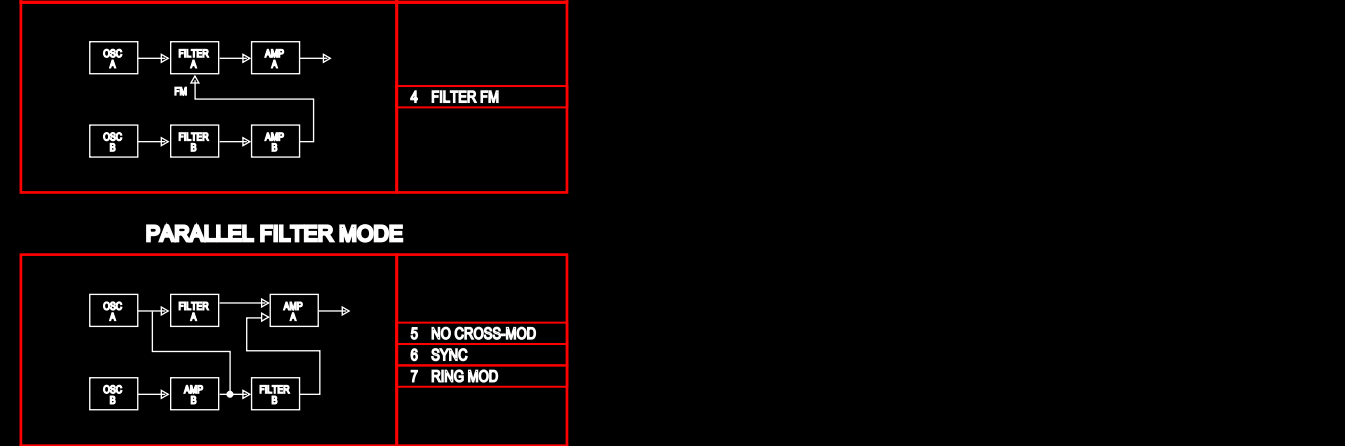 
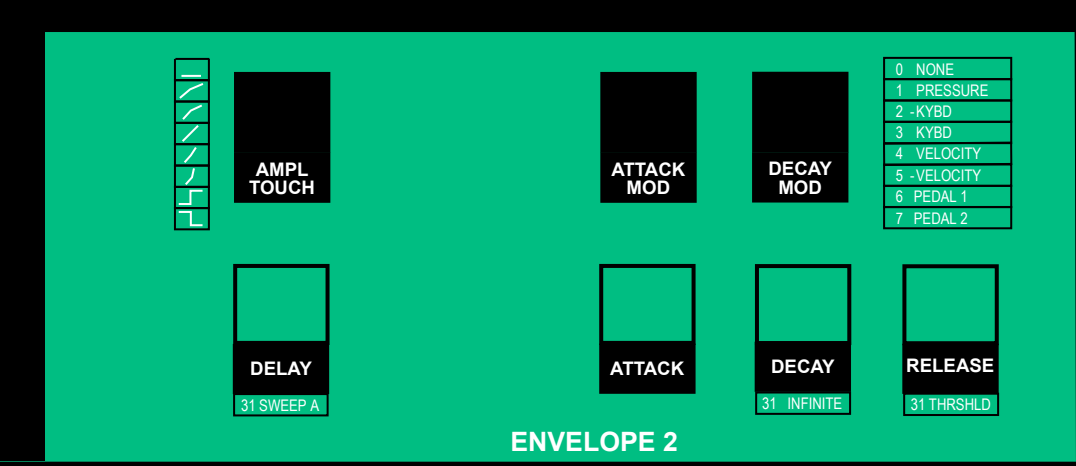 
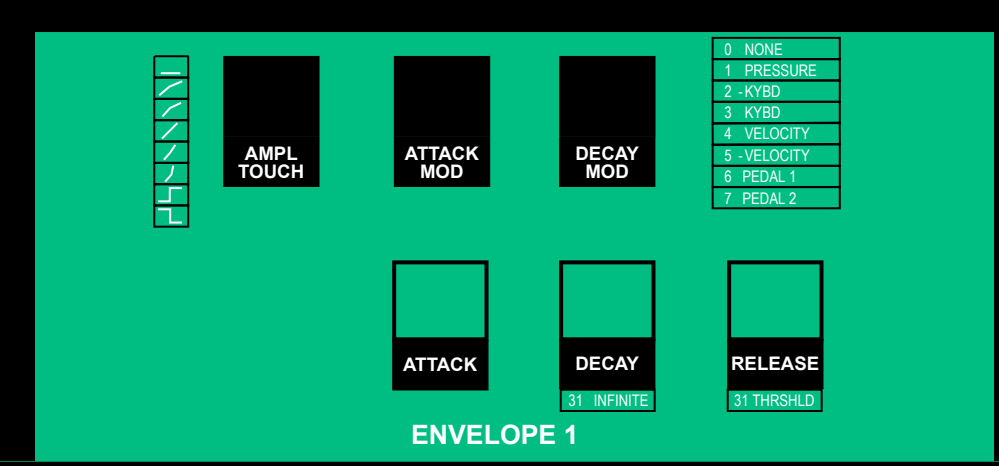 
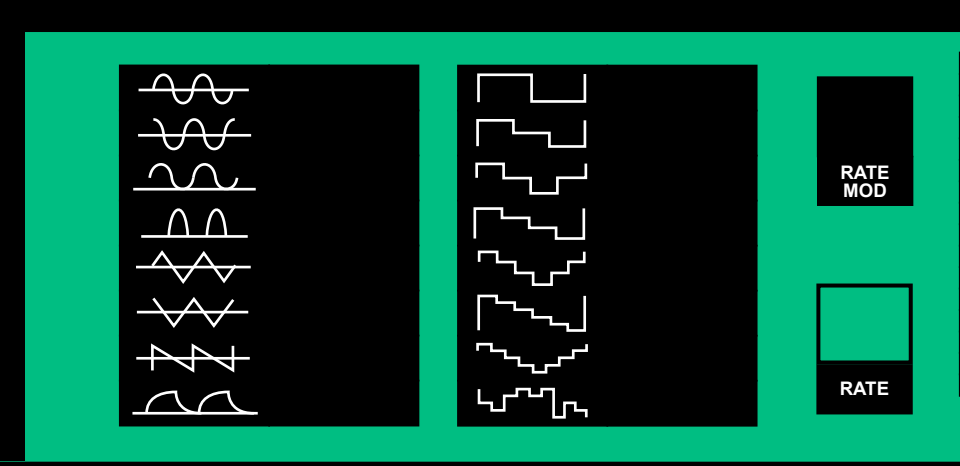 
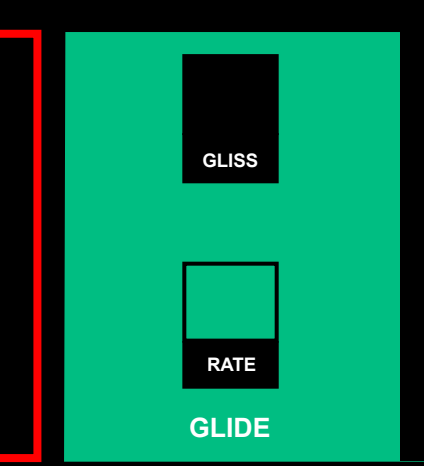 
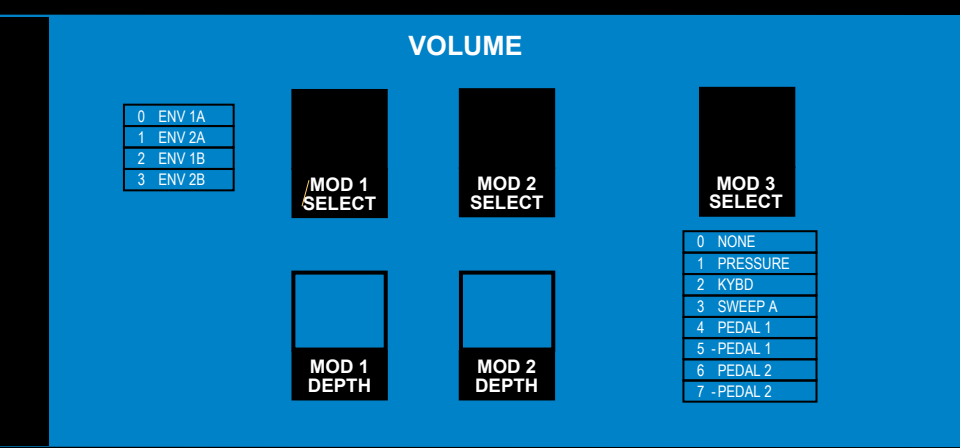 
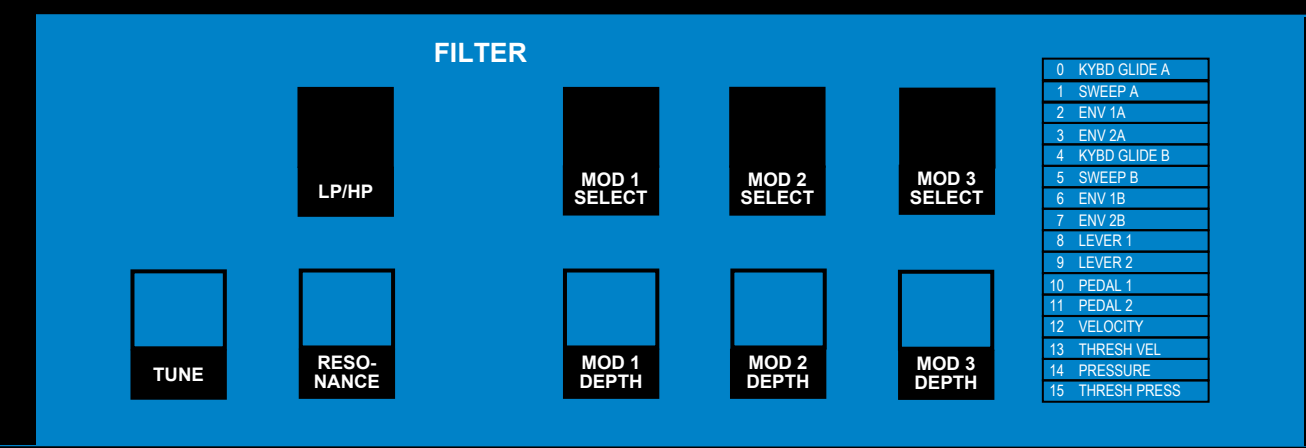 


- POLY
- MONO
- 0 POLYPHONIC
  - 1 PITCH ORDERED
  - 2 CHORD BUFFER
  - 3 ALL CHAN (POLY)
  - 4 ALL CHAN (MONO)
  - 5 LAST NOTE, S-TRIG
  - 6 LAST NOTE, M-TRIG
  - 7 FIRST NOTE
  - 8 BOTTOM NOTE
  - 9 TOP NOTE
  - 10 ARPEGGIO UP
  - 11 ARPEGGIO DOWN
  - 12 ARPEGGIO UP/DOWN
  - 13 ARPEGGIO DOWN/UP
  - 14 SEQUENCER
  - 15 RANDOM

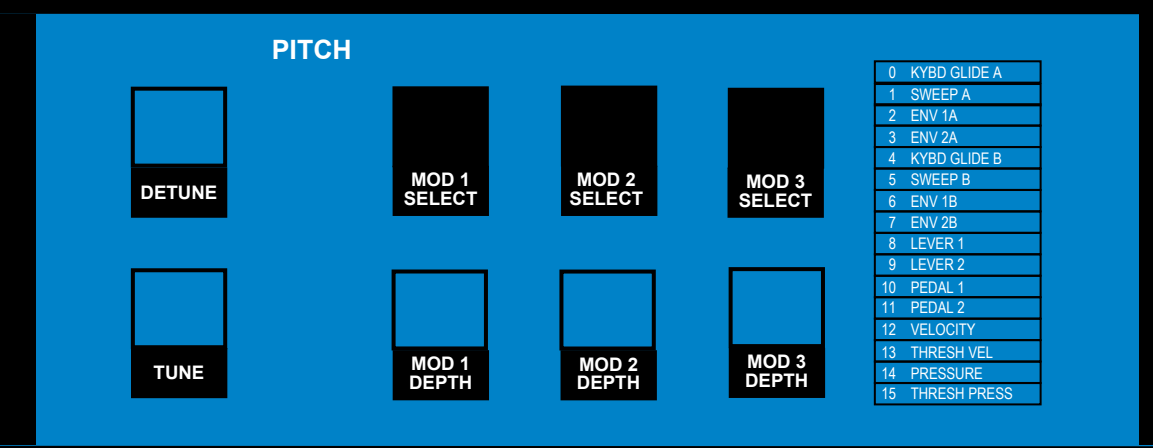

LEFT (LATCH)	RIGHT (SUSTAIN)
0	ENABLED
1	ENABLED
2	DISABLED
3	DISABLED
4	NOTE GATE
5	NOTE GATE
6	- NOTE GATE
7	- NOTE GATE
8	ENABLED
9	ENABLED
10	DISABLED
11	DISABLED
12	ENABLED
13	ENABLED
14	ENABLED
15	DISABLED

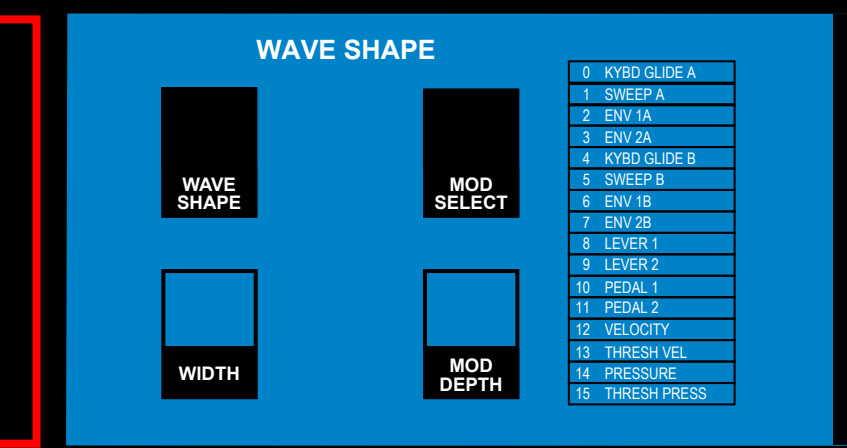

- SET SPLIT FUNCTIONS**
- 1 PATCH 0
  - 2 OUTPUT 0
  - 3 OUTPUT 1
  - 4 OUTPUT 2
  - 5 OUTPUT 3
  - 6 BATTERY CHECK
  - 7 KILL BAD BOARD
  - 8 DISPLAY BAD BOARD
  - 9 TAPPER ON/OFF
  - 10 CASSETTE MODE
  - 11 PROGRAM 0 PACKET
  - 12 PROGRAM 1 PACKET
  - 13 PROGRAM n PACKET
  - 14 STOP PACKET
  - 15 OUTPUT SUBROUTINE
  - 16 PERFORMANCE DISABLE
  - 17 PERFORMANCE ENABLE
  - 18 PANEL DISABLE
  - 19 PANEL ENABLE
  - 20 SEND PROGRAM
  - 21 ATTACK THRESHOLD
  - 22 RELEASE THRESHOLD
  - 23 RELEASE SLOW RATE
  - 24 RELEASE FAST RATE
  - 25 BRANCH SUBROUTINE
  - 26 MUTE A CHANNELS
  - 27 MUTE B CHANNELS
  - 28 UNMUTE
  - 29 MUTE OSCILLATORS
  - 30 TEST LEDs
  - 31 (SPECIAL RESET)
  - 32 (SPECIAL RESET #2)
  - 33 (SPECIAL RESET #3)
  - 34 PRESSURE DISABLE
  - 35 PRESSURE ENABLE
  - 36 CC+ PROG MODE ON/OFF
  - 37 CC+ VOICE ALLOCATION
  - 38 CC+ RANDOM PATCH
  - 39 CC+ CREATE SCRATCH PATCH
  - 40 CC+ AUTOTUNE INFO
  - 41 SYNTech PRGM MODE
  - 42 SYNTech CONFIG SYSX
  - 43 SYNTech BANK SYSX
  - 44 SYNTech MIDI PRGM 0
  - 45 SYNTech MIDI PRGM 1
  - 46 SYNTech MIDI PRGM 2
  - 47 SYNTech MIDI PRGM 3
  - 48 SYNTech MIDI PRGM 4
  - 49 SYNTech MIDI PRGM 5
  - 50 RESET MAIN COMPUTER
- CC+ FUNCTIONS**
- P1 BASE CHANNEL
  - P2 MODE
  - P3 PROGRAM CHANGE
  - P4 INSTRUMENTS AVAILABLE
  - P5 PARM. CHANGE
  - P7 LEVER 1 SELECT
  - P8 LEVER 1 POLARITY
  - P9 LEVER 2 SELECT
  - P10 LEVER 2 POLARITY
  - P11 PEDAL 1 SELECT
  - P12 PEDAL 2 SELECT
  - P13 FOOTSWITCH 2 SELECT
  - P14 VOLUME SELECT
  - P15 PARAM SLIDER SELECT
  - P16 MIDI PRESSURE MODE
  - P17 LOCAL CONTROL
  - P18 MCM MODE SELECT
  - P19 MCM EDIT
  - P20 MCM INIT
  - P21 MCM SYSX DUMP
  - P22 CHROMA/EXPANDER SELECT
  - P23 FIFTY PRGM SYSX DUMP
  - P24 CONT. CONTROLLER MODE
  - P25 SHOW VERSION
  - P26 MIDI PRESSURE TX
  - P27 SERIAL DISPLAY
  - P28 SWEEP CLR SOURCE
  - P29 MIDI TX VELOCITY TBL
  - P30 AUTO-SEND MIDI CC
  - BANK SELECT: PRG SEL + 1-4