 
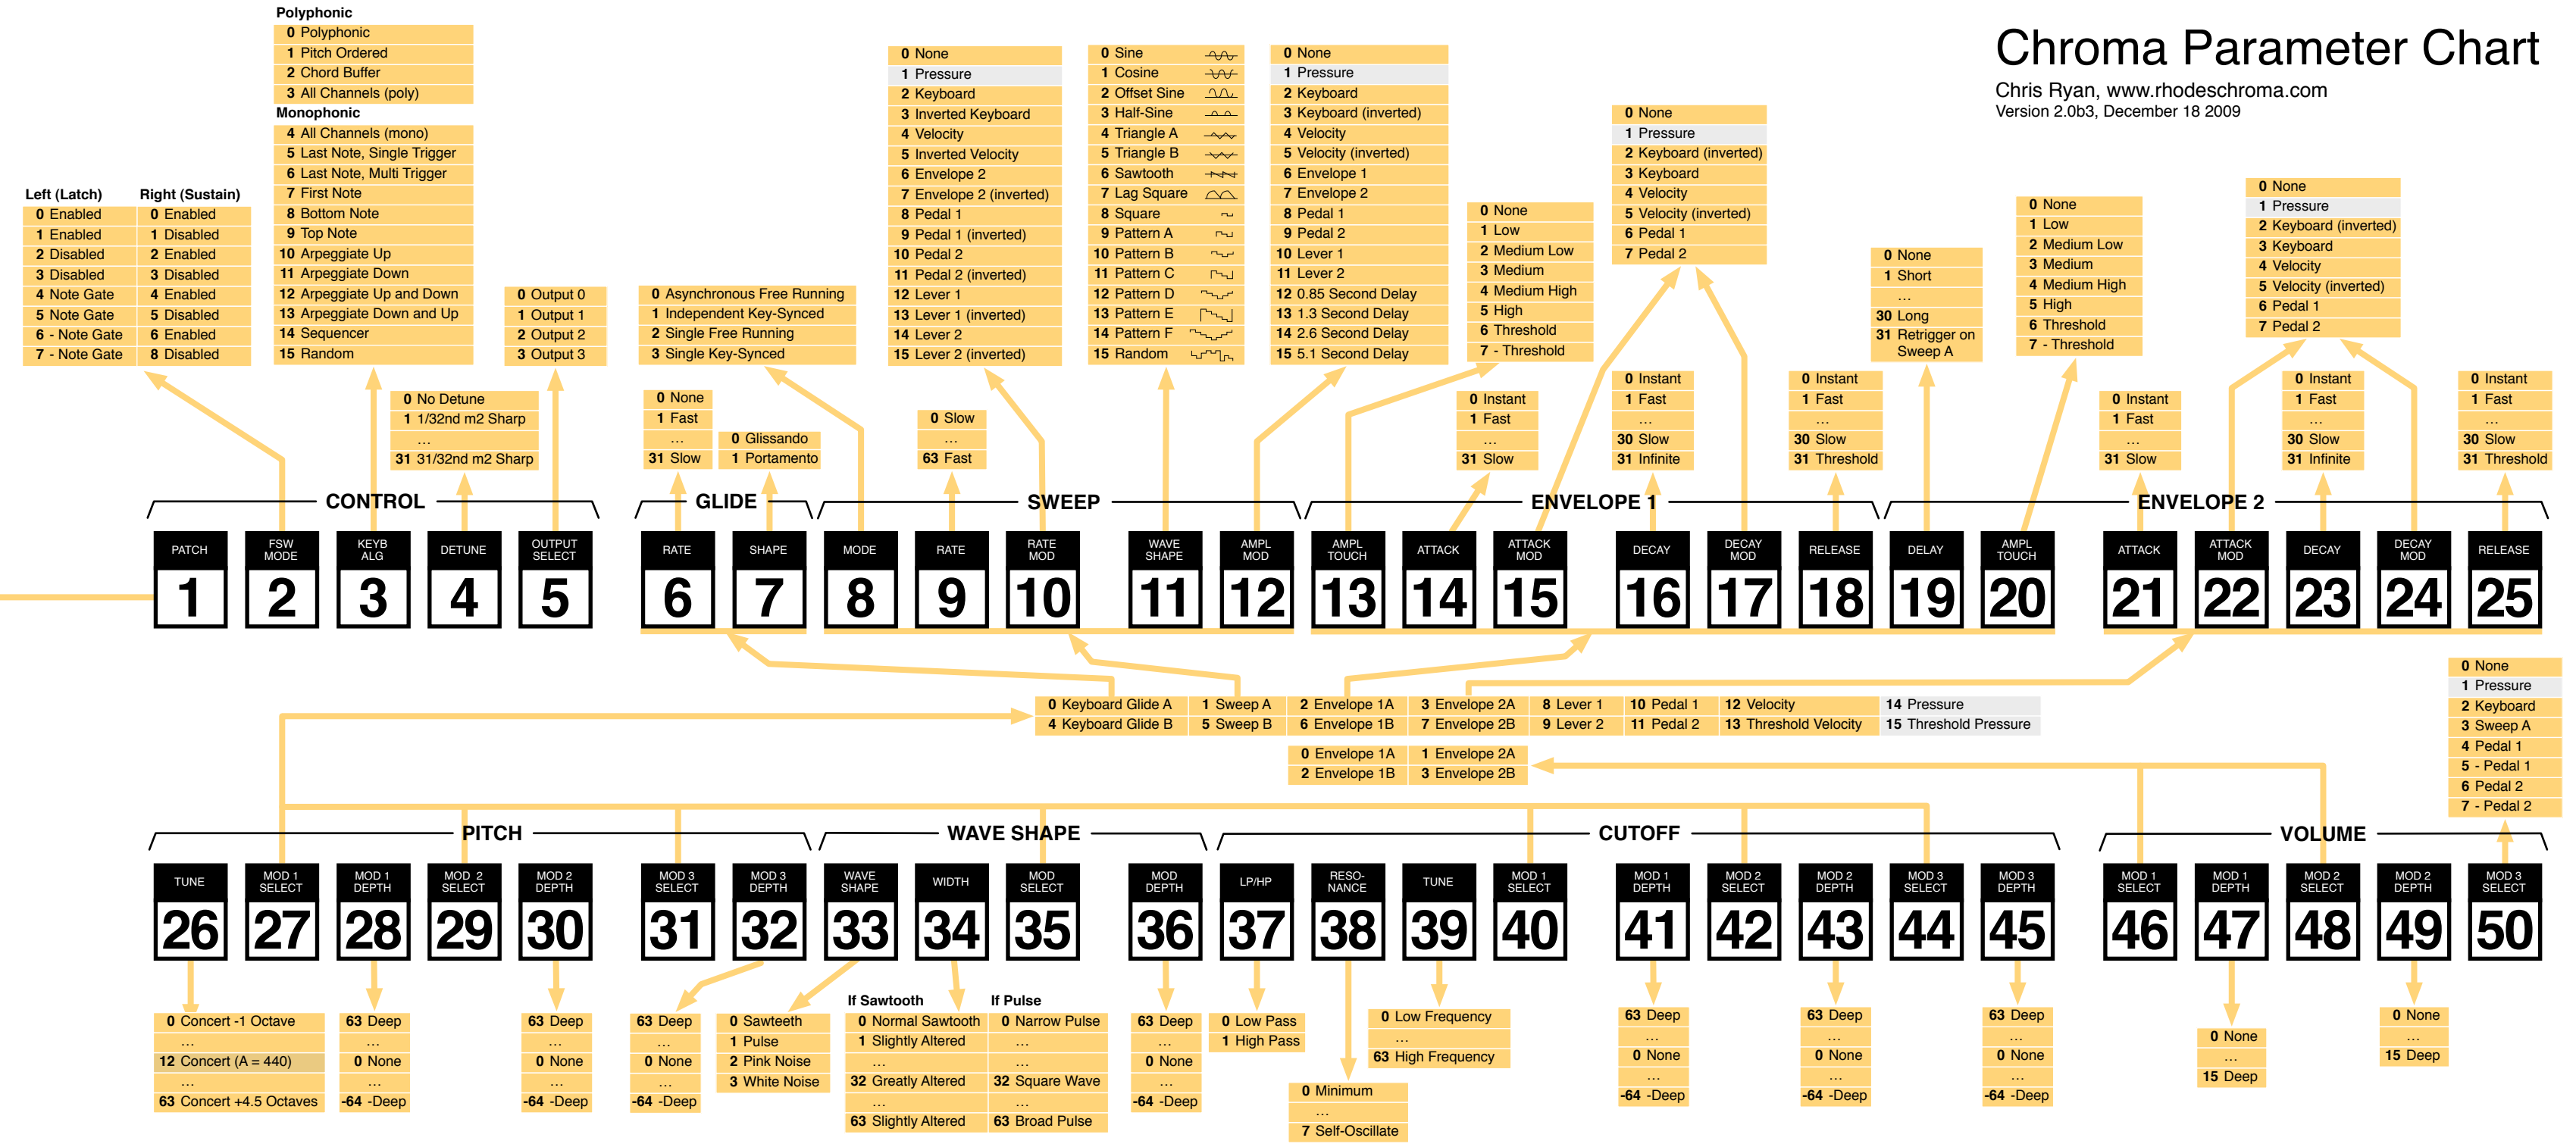 


Chroma Parameter Chart

Chris Ryan, www.rhodeschroma.com
Version 2.0b3, December 18 2009

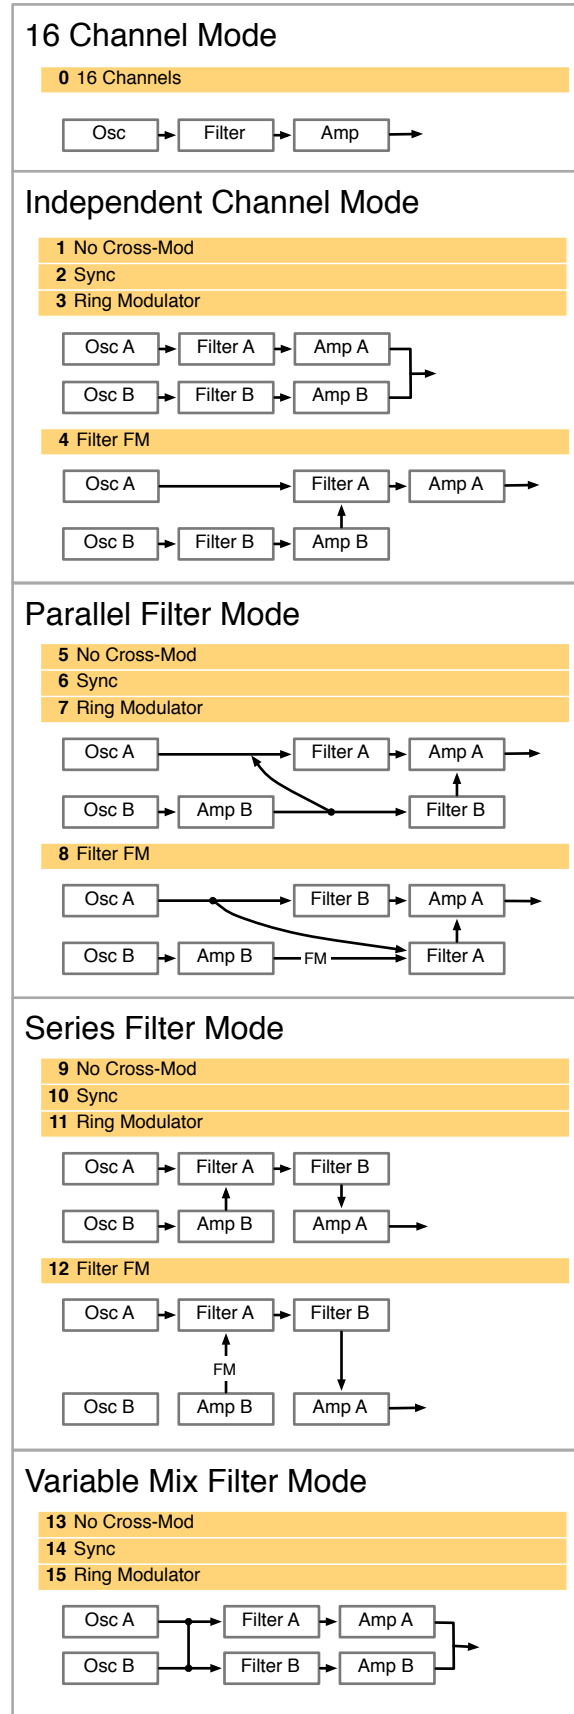

1 Patch 0	10 Cassette Mode	19 Panel Enable	28 Unmute	37 CC+ Show Voice Allocation
2 Output 0	11 Program 0 Packet	20 Syntech Send Program	29 Mute Oscillators	39 CC+ Create Scratch Patch
3 Output 1	12 Program 1 Packet	21 Attach Threshold	30 Test LEDs	46 Syntech Program Mode
4 Output 2	13 Program n Packet	22 Release Threshold	31 Special Reset*	47 Syntech Config Sysex
5 Output 3	14 Stop Packet	23 Release Slow Rate	32 Special Reset #2*	48 Syntech Bank Sysex
6 Battery Check	15 Output Subroutine	24 Release Fast Rate	33 Special Reset #3*	49 Syntech MIDI Program 0
7 Kill Bad Board	16 Performance Disable	25 Branch Subroutine	34 Pressure Disable	50 Reset Main Computer
8 Display Bad Board	17 Performance Enable	26 Mute A Channels	35 Pressure Enable	
9 Tapper On/Off	18 Panel Disable	27 Mute B Channels	36 CC+ Program Mode On/Off	

Syntech/CPU Plus (CC+)	CPU Plus (CC+) Only
P1 Base Channel (1-16)	P17 Local Control
P2 Omni/Play Mode	P18 MCM Mode Selection
P3 MIDI Out/Thru	P19 MCM Edit
P4 Send Program Changes	P20 MCM Initialize
P5 Instruments Available	P21 MCM Sysex Dump
P6 Parameter Changes	P22 Panel/Keyboard Mode
P7 Lever 1 Select	P23 50 Program Sysex Dump
P8 Lever 1 Polarity	P24 Cont Controller Mode
	P25 Display Firmware Version

*See note on Chroma site